



Hoover's quick & snappy start up guide.

60 cm Induction Cooktop

Model #:	HV-C60CI
Version #:	V1.0
After Sales Support	1300 886 649

Let's get your cooktop up and running!

Welcome to your new Hoover cooktop! We hope that this product brings you many years of enjoyment.

IMPORTANT! This cooktop must be professionally installed to an appropriately earthed wiring system by a licensed electrician, following the instructions in the supplied instruction manual. Alternatively, you can install it yourself into an established, standard 10 amp household wall socket.

Please ensure you make the manual available to the electrician, if you chose to hardwire this appliance. Do not try to hardwire the cooktop yourself! Doing so will expose you to danger and could invalidate any warranty or liability claims.

 
Consult the full instruction manual for comprehensive installation, usage and cleaning instructions and important safety advice. This guide only contains basic usage instructions.

IMPORTANT! Induction cooktop-compatible cookware must have a base made of material that attracts a magnet. Only use cookware with a base suitable for induction cooking. Look for the induction symbol on the packaging or on the bottom of the pan (see pages 18-19 of the instruction manual for more information on suitable cookware).


First Use

- Place a saucepan filled half full with cold water on one cooking zone.
- Switch on that cooking zone and let it heat up for 5 minutes at the maximum setting to burn off any "new smell" or humidity that may have formed on the hob.
- Repeat this for each zone, one at a time.

NOTE: Any odour or smoke on first use can be disregarded safely. It will disappear with repeated use. Ensure good ventilation.

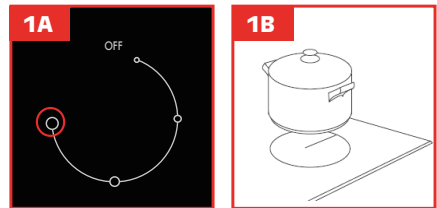


Control Panel




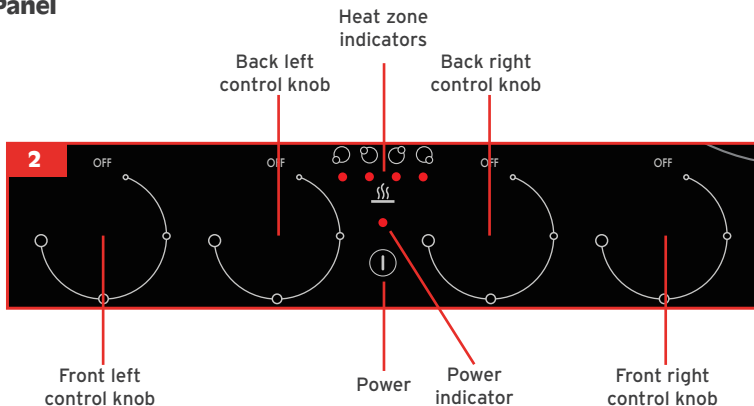 


Using the Cooktop

- Touch the power button to switch on the cooktop (Fig. 3a).
- Place a suitable pan on the cooking zone you want to use (Fig. 3b). The pan and cooking zone diameters should match. Make sure the bottom of the pan and the surface of the cooking zone are clean and dry.
- Select a heat setting (from 1-9) by turning the knob (Fig. 3c) for the cooking zone you want to use. The heat indicator for the corresponding hob will illuminate. You must select a heat level within one minute, otherwise the cooktop will automatically switch off.
- **NOTE:** The selected heat level applies if you are only using one hob. Because this appliance is power limited to 2.4 kW, if you are using multiple hobs, the heat level will be affected. Please see the table on page 22 of the instruction manual for more information.
- When you have finished cooking, turn the cooking zone off by turning the knob back to the OFF position.
- Turn the whole cooktop off by touching the power button.

NOTE: Residual heat warning

    - After a cooking zone is switched off, the indicator(s) [●] above the residual heat symbol [] (Fig. 3d) indicate that the temperature of the corresponding zone is still high enough to cause injury. It will disappear when the surface has cooled down to a safe temperature.
- The residual heat indicator can also be used as an energy saving function, for keeping food warm on a cooking zone that is still hot.

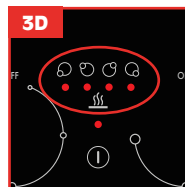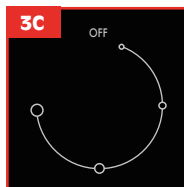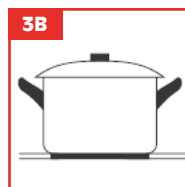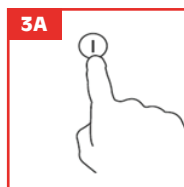

Hope you enjoy your new Hoover
induction cooktop!